

# ADJUSTMENT SHEET

## KUBICA HYBRID K2780



### VERTICAL ADJUSTMENT



Untighten the blocking screw **A** in all the hinges on the door leaf




Position manually the door leaf **P** to reach the necessary height



Tighten the blocking screw **A** in all the hinges (max 4 Nm)



Block by screws **V**

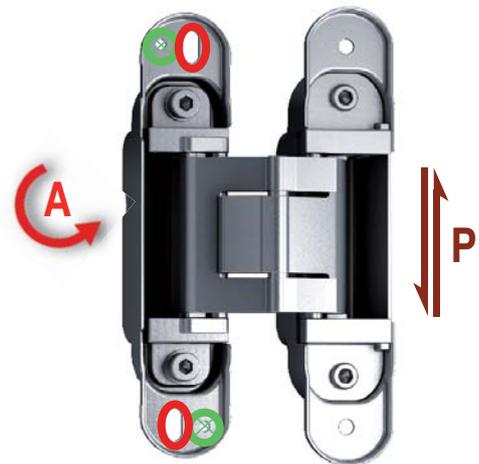

### HORIZONTAL ADJUSTMENT



Rotate screws **B**

Note: do the same rotation with both screws



### DEPTH ADJUSTMENT



Untighten the blocking screw **C** in all the hinges on the door leaf



Position manually the door leaf **P** to align it with the wall



Tighten the blocking screw **C** in all the hinges (max 4 Nm)

