

ADJUSTMENT SHEET

KUBICA K5080



VERTICAL ADJUSTMENT




Untighten the blocking screw **A** in all the hinges on the door leaf



Rotate the eccentric **B** in all the hinges



Tighten the blocking screw **A** in all the hinges (max 4 Nm)

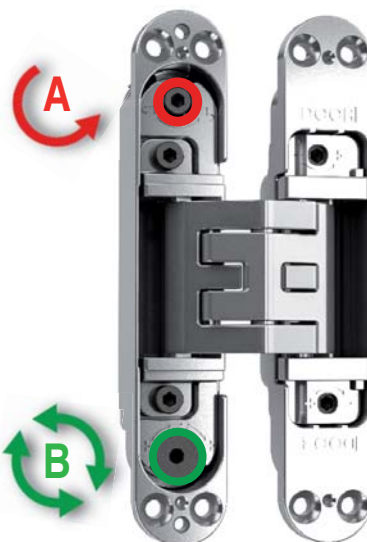

HORIZONTAL ADJUSTMENT



Rotate screws **C**

Note: do the same rotation with both screws



DEPTH ADJUSTMENT



Untighten the blocking screw **D** in all the hinges on the door leaf



Position manually the door leaf **P** to align it with the wall



Tighten the blocking screw **D** in all the hinges (max 4 Nm)

