

ADJUSTMENT SHEET

Kubikina K6100



VERTICAL ADJUSTMENT




Untighten the blocking screw **A** in all the hinges on the door leaf



Position manually the door leaf **P** to reach the necessary height



Tighten the blocking screw **A** in all the hinges (max 4 Nm)

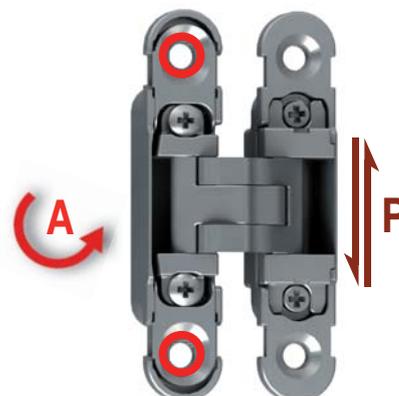

HORIZONTAL ADJUSTMENT



Rotate screws **B**

Note: do the same rotation with both screws



DEPTH ADJUSTMENT



Untighten the blocking screw **C** in all the hinges on the door leaf



Position manually the door leaf **P** to align it with the wall



Tighten the blocking screw **C** in all the hinges (max 4 Nm)

